

HDD LOCATING SYSTEMS
Sense
IT MAKES SENSE

Russian HDD Locating Systems


SNS
«t series»

Quick User`s Guide




22/14 Oktyabr'skaya str. Ulyanovsk, Russia, 432028
8 (8422) 45-72-00, info@sense-inc.ru, www.sense-inc.ru


ClockFace

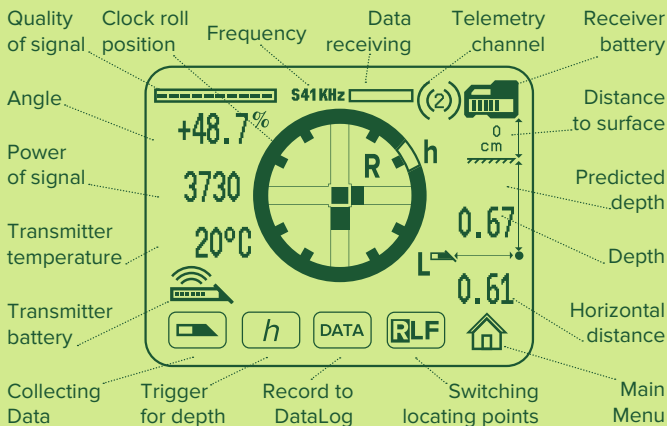




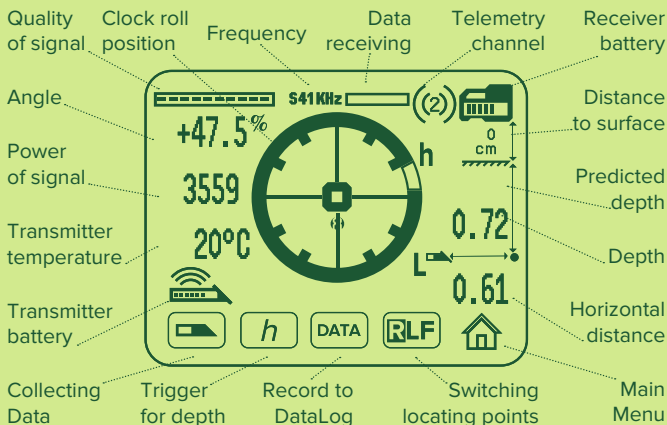


Cross in Box

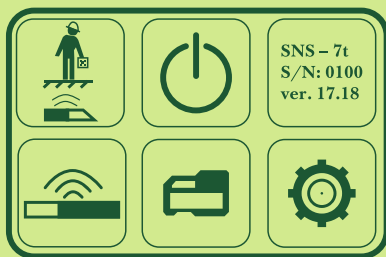

Locating Menu

 

-  Locating menu
-  Power OFF
-  System info
-  Transmitter settings
-  Receiver settings
-  Main settings

To navigate



To change



To confirm



Main Settings



Contrast



Backlight



Color inversion



Screen heating
(optional)



Language



Angle (grades
or percentages)



Temperature
(C°/ F°)



Distance/Depth
measuring



Date and Time



Change
location view




Uerwater
Antenna



Main Menu




Transmitter Settings

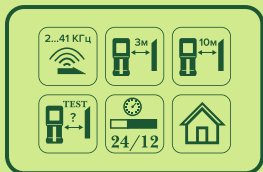

Steps:



1. Choose icon , and confirm
2. Check the noise test graph
3. Choose the best frequency
4. Choose the power mode
5. Confirm settings
6. Choose sleep mode
7. Insert batteries to the transmitter

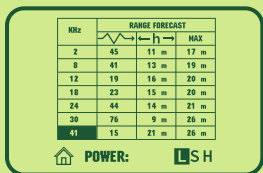

CAUTION!!!

During 10 sec you have to:

8. Close the cap
9. Put down the transmitter to correct position
10. Confirm after you see «COMPLETE!»

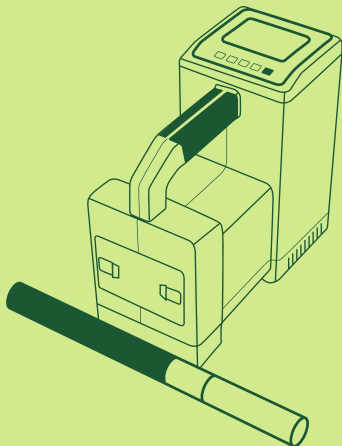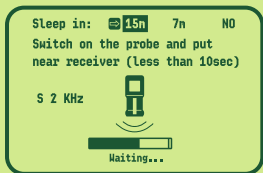





Calibration





Calibration 3 / 10m

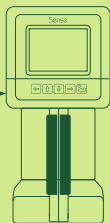

Calibration Test

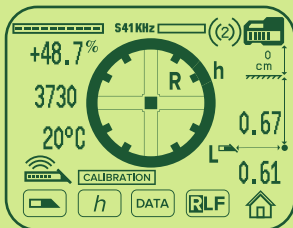

Repeater

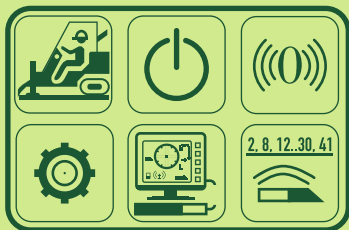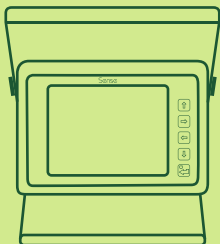

To navigate



To change



To confirm



Locating menu



Power OFF



Telemetry channel



Main settings



Transmitter type



S.f. helper



Switching frequencies



Steps	Clock	Waiting time, sek
1 – preparation	10	15-30
2 – preparation	2	15-30
3 – preparation	7	15-30
4 – choose	from 12 to 6	15-30
5 – confirm	from 8 to 10	15

Remark: in frequency changing process
YOU HAVE TO set "24 o'clock" on the Receiver